


# Rockfon® Hold Down Clip


Installation Guide

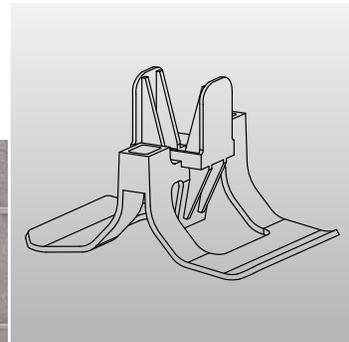

Project – Parkhaus Parking Garage in Essen, Germany  
Product – Rockfon® Facett™

# Rockfon® Hold Down Clip

Rockfon's hold down clips are designed to work with all Chicago Metallic® suspension systems and many Rockfon specialty metal ceilings. These hold down clips provide better tile retention by mitigating the effects of impact and uplift. This guide will cover the hold down clips we offer, and provide application and installation details.

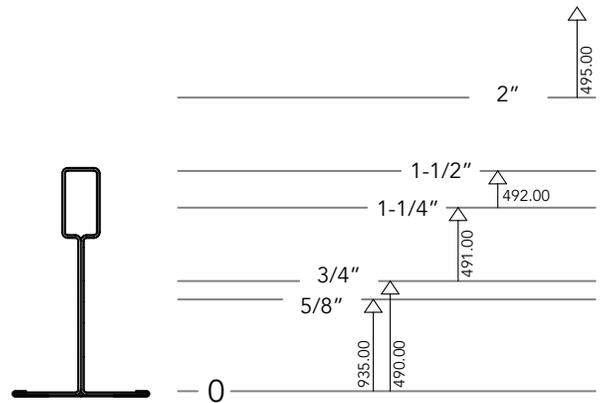


## 935.00 Universal Hold Down Clip for 0" – 5/8" Panels

- Installed by pushing down over the bulb of the grid. Push down until the clip contacts the back surface of the panel.
- Clips are designed to be installed on main runners and cross tees.


### Compatible With:

- Rockfon® Planostile™ Lay-in Panels
- Rockfon® Acoustical Panels

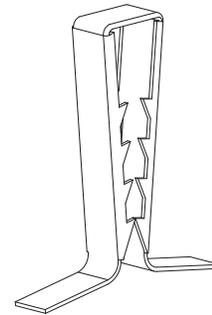

## 490.00 Hold Down Clip for 0" – 3/4" Panels

- Installed by pushing over the bulb of the grid. The clip will self-adjust to the panel thickness.
- Clips are designed to be installed on cross tees.
- For fully concealed (CDX) and semi-concealed (SCD) edge types, the clips must be installed on the supporting edge.
- When installed with CDX & SCD edge types, the 490.00 will not limit accessibility of the system.
- Required for installing CDX tiles in seismic D, E, and F zones. For more info about seismic CDX installations, reference the CDX Seismic Installation Guide.

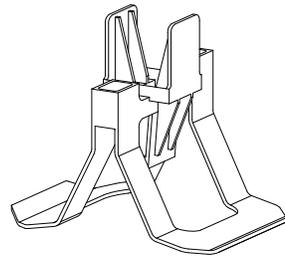

### Compatible With:


- SQ: Pacific™, Artic®, Tropic®, Koral™, Medical™ Standard
- SL: Pacific™, Artic®, Tropic®, Koral™, Medical™ Standard, Medical™ Plus
- SLN: Pacific™, Artic®, Tropic®, Koral™, Alaska®, Medical™ Standard, Medical™ Plus
- SLT: Alaska®
- SCD: Alaska®, Sonar®
- CDX: Alaska®, Sonar®, Medical™ Plus
- Metal Ceilings: Traditions™, Graphgrid®

#### 491.00 Hold Down Clip for 3/4" – 1-1/4" Panels

- Installed by pushing over the bulb of the grid. The clip will self-adjust to the panel thickness.
- Clips are designed to be installed on cross tees.

##### Compatible With:

- SQ: Alaska®, Alaska® dB, Sonar®, Sonar® dB 1" - 1-1/4", Medical™ Plus, Medical™ Air, Hygienic Plus™
- SLN: Alaska® dB, Sonar®, Sonar® dB 1" - 1-1/4"
- SLT: Alaska® dB, Sonar®, Sonar® dB 1" - 1-1/4"

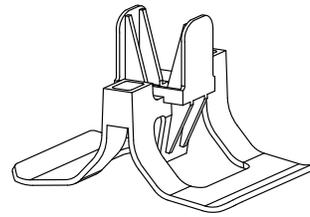


#### 492.00 Hold Down Clip for 1-1/2" Panels

- Installed by pushing over the bulb of the grid. The clip will self-adjust to the panel thickness.
- Clips are designed to be installed on cross tees.

##### Compatible With:

- SQ: Sonar® dB 1" - 1-1/2", Sonar® Activity, Facett™ 1-1/2"
- SLN: Sonar® dB 1" - 1-1/2", Sonar® dB 2"
- SLT: Sonar® dB 1" - 1-1/2", Sonar® dB 2", Sonar® Activity

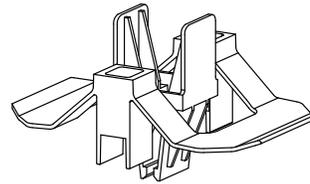


#### 495.00 Rockfon Facett™ Hold Down Clip Kit for 2" – 4" Panels

- This two-part clip installs by snapping the sheet metal bracket over the bulb of the grid. Squeeze the wire form together and insert into the bracket. Push the wire form down the ratchet feature until the wire form puts pressure on the back surface of the panel.
- Clips are designed to be installed on main runners and cross tees.


##### Compatible With:

- Sonar® dB 2"
- Facett™ 4"
- Industrial™ Black / Opal

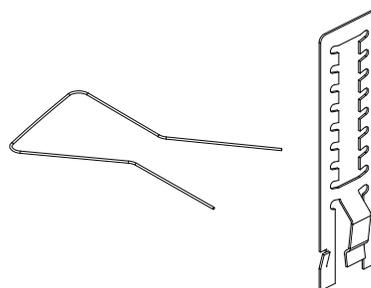


**Installation Notes and Clip Placement Details**

- 490.00, 491.00, 492.00, 935.00.
- Hold down clips are to be installed on cross tees, 1 clip every 2 feet.

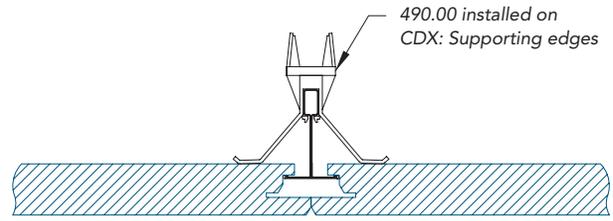


**Standard Install Clip Placement**

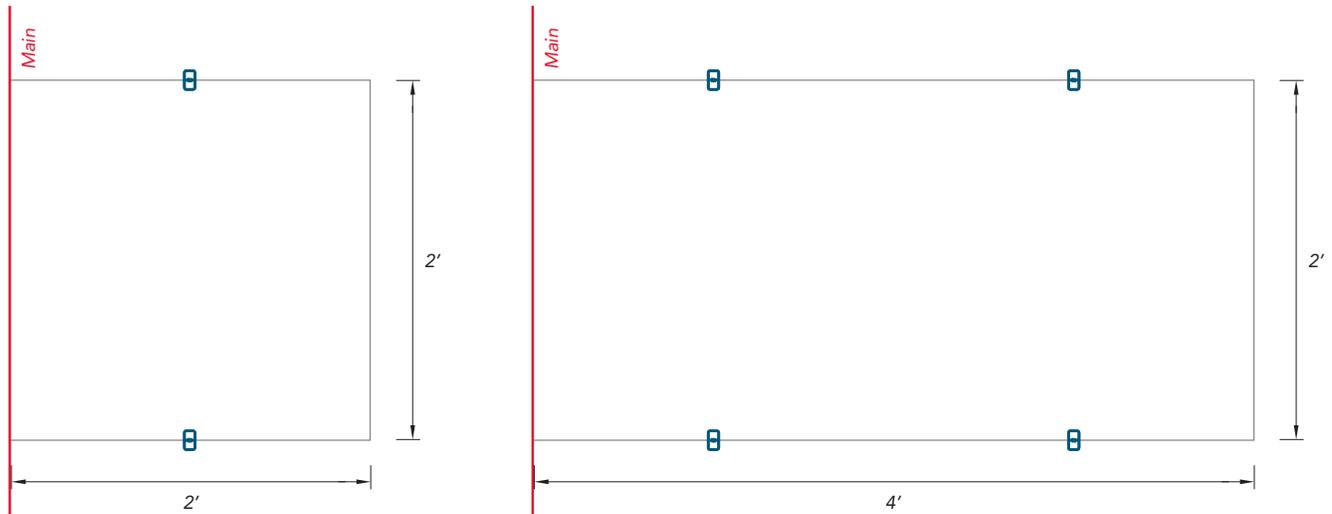

**Installation Notes and Clip Placement Details**

- 495.00
- Hold down clips are to be installed on main runners and cross tees, 1 clip every 2 feet.
- Perimeter panels need 6", 2" x 2" wall angle on top in lieu of clip that is securely fastened to the wall.

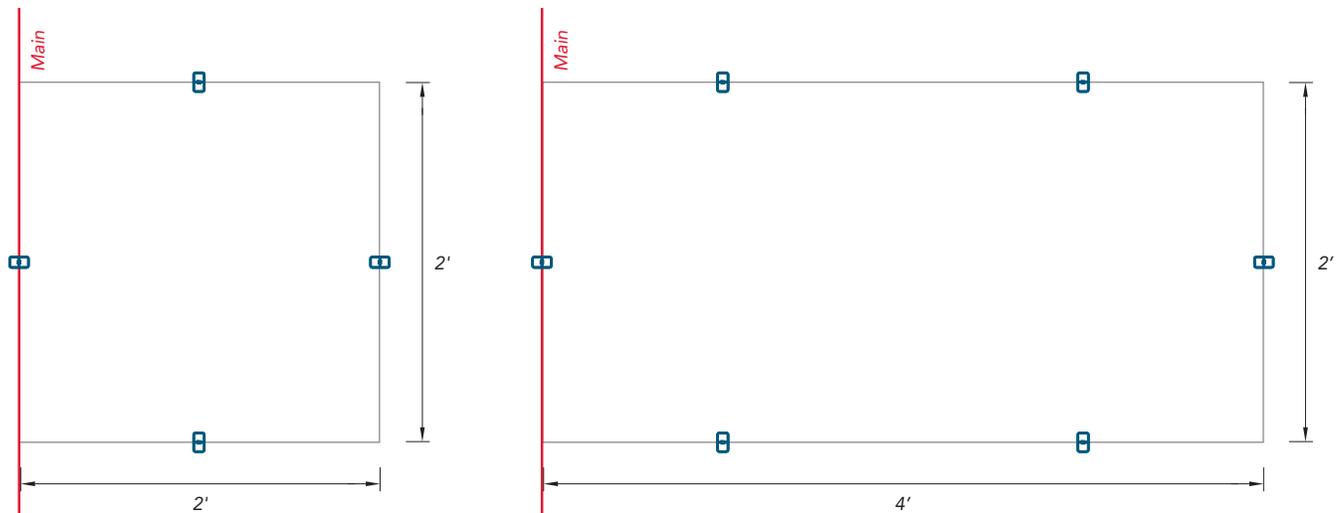


### Seismic CDX Install Clip Placement

- 490.00 is required for installing CDX in seismic D, E and F zones. For more info about seismic CDX installations and clip placement, reference the CDX Seismic Installation Guide.

### Hold Down Requirements

Panel size	Hold Downs CDX Supporting Edge	Location
2' x 2'	1	Centered on CDX Supporting Edge
2' x 4'	1	Centered on CDX Supporting Edge
20" x 5'	2	1' from CDX Supporting Edge
2' x 5'	2	1' from CDX Supporting Edge
2' x 6'	2	18" from CDX Supporting Edge
2' x 8'	2	2' from CDX Supporting Edge

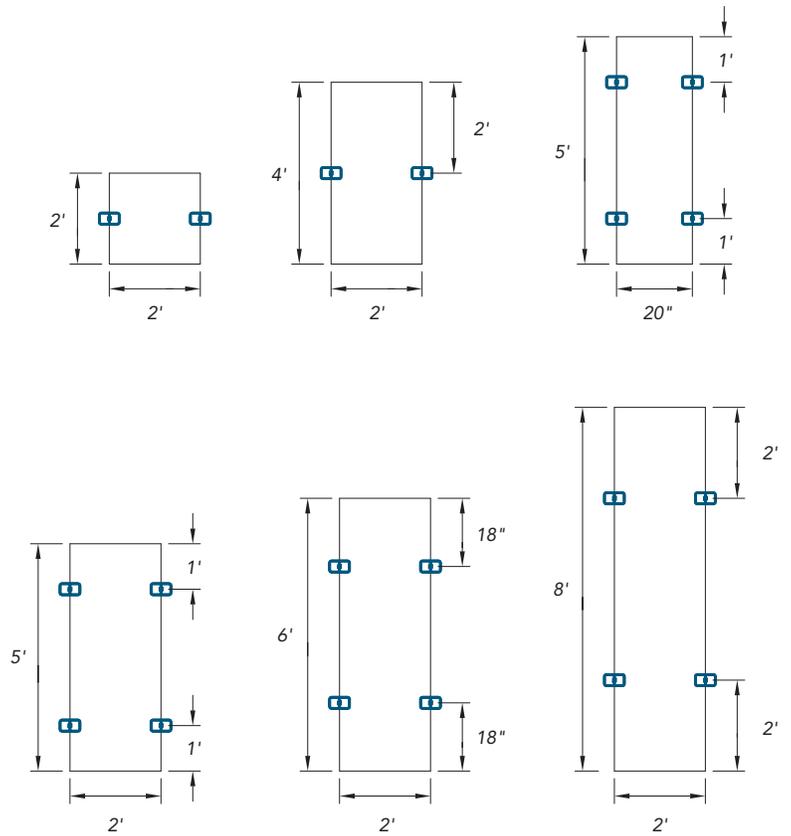

Rockfon® is a registered trademark  
of the ROCKWOOL Group.

2018 | Subject to alterations in range and product technology without prior notice. Rockfon accepts no responsibility for printing errors.  
© ROCKWOOL International A/S 2018. All rights reserved. ® denotes a trademark that is registered in the United States of America.



**Rockfon**  
4849 S. Austin Ave.  
Chicago, IL 60638 USA

Tel. +1-800-323-7164  
Fax. +1-800-222-3744  
[www.rockfon.com](http://www.rockfon.com)