

Extractor hood

AW 280790/280720

Safety Instructions

Read And Save These Instructions.

WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

- a.) Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer.
- b.) Before servicing or cleaning unit, switch power off at service panel and lock the service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

CAUTION:

FOR GENERAL VENTILATION USE ONLY. DO NOT USE TO EXHAUST HAZARDOUS OR EXPLOSIVE MATERIALS AND VAPORS.

WARNING - TO REDUCE THE RISK OF A RANGE TOP GREASE FIRE.


- a.) Never leave surface units unattended at high settings. Boilovers cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings.
- b.) Always turn hood on when cooking at high heat or when cooking flaming foods.

- c.) Clean ventilating fans frequently. Grease should not be allowed to accumulate on fan or filter.
- d.) Use proper pan size. Always use cookware appropriate for the size of the surface element.

WARNING - TO REDUCE THE RISK OF INJURY TO PERSONS IN THE EVENT OF A RANGE TOP GREASE FIRE, OBSERVE THE FOLLOWING:

- a.) **SMOTHER FLAMES** with a close-fitting lid, cookie sheet, or metal tray, then turn off the burner. **BE CAREFUL TO PREVENT BURNS.** If the flames do not go out immediately, **EVACUATE AND CALL THE FIRE DEPARTMENT.**
- b.) **NEVER PICK UP A FLAMING PAN** - You may be burned.
- c.) **DO NOT USE WATER**, including wet dishcloth or towels - a violent steam explosion will result.
- d.) Use an extinguisher **ONLY** if:
 1. You know you have Class ABC extinguisher, and you already know how to operate it.
 2. The fire is small and contained in the area where it started.
 3. The fire department is being called.
 4. You can fight the fire with your back to an exit.

Fig. 1
GAS

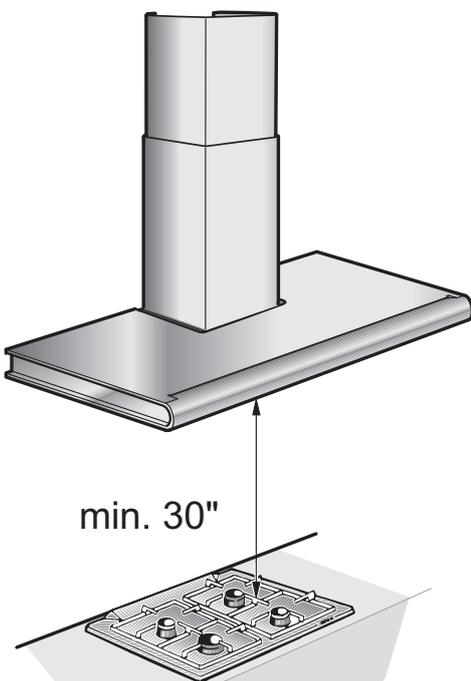

ELECTRIC

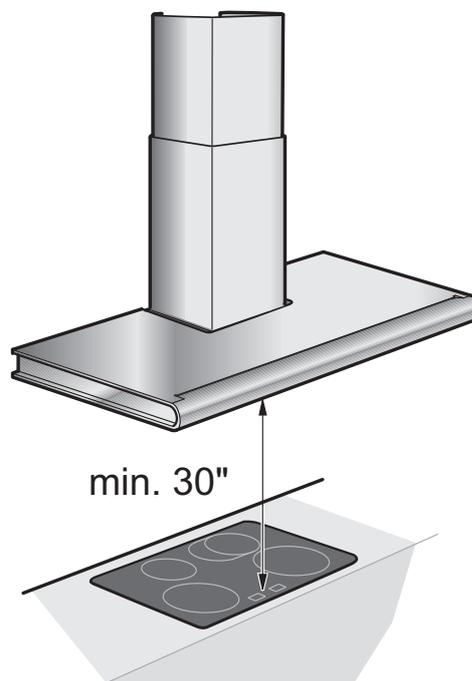


Table of Contents

Operating Instructions

Safety Instructions 2

Operating modes 4

Exhaust-air mode 4

Circulating-air mode 4

Coanda effect 5

Operating for the First Time 6

If you encounter a problem 6

Safety notes 7

Operating procedure 8

Intensive setting 9

Special functions 9

Filters and maintenance 10

Grease filters 10

Saturation indicator F 10

Activated carbon filter 11

Cleaning and care 12

Replacing the light bulbsn 13

Installation Instructions

Important information 15

Prior to installation 17

Exhaust-air mode 17

Circulating-air mode 18

Preparing the wall 19

Electrical connection 19

Installation 20

Operating modes

Exhaust-air mode

- **Installation accessories for exhaust air mode.**

Ventilation duct

AD280-012 for ceiling heights of $88^{19/32}$ "– $103^{5/32}$ "

AD280-022 for ceiling heights of $103^{5/32}$ "– $118^{1/2}$ ".

- The extractor-hood fan extracts the kitchen vapours and conveys them through the grease filter into the atmosphere.
- The grease filter absorbs the solid particles in the kitchen vapours.
- The kitchen is kept almost free of grease and odours.

When the extractor hood is operated in exhaust-air mode simultaneously with a different burner which also makes use of the same chimney (such as gas, oil or coal-fired heaters, continuous-flow heaters, hot-water boilers) care must be taken to **ensure that there is an adequate supply of fresh air** which will be needed by the burner for combustion.

Safe operation is possible provided that the underpressure in the room where the burner is installed does not exceed 4 Pa (0.04 mbar).

This can be achieved if combustion air can flow through non-lockable openings, e.g. in doors, windows and via the air-intake/exhaust-air wall box or by other technical measures, such as reciprocal interlocking, etc.

If the air intake is inadequate, there is a risk of poisoning from combustion gases which are drawn back into the room.

An air-intake/exhaust-air wall box by itself is no guarantee that the limiting value will not be exceeded.

Note: When assessing the overall requirement, the combined ventilation system for the entire household must be taken into consideration. This rule does not apply to the use of cooking appliances, such as hobs and ovens.

Unrestricted operation is possible if the extractor hood is used in recirculating mode – with activated carbon filter.

Circulating-air mode

- **Installation accessories for circulating air mode.**


Ventilation duct

AD280-112 for ceiling heights of $92^{29/32}$ "– $103^{5/32}$ "

AD280-122 for ceiling heights of $103^{5/32}$ "– $118^{1/2}$ ".

- An activated carbon filter must be fitted for this operating mode (see Filters and maintenance).
- The extractor-hood fan extracts the kitchen vapours which are purified in the grease filter and activated carbon filter and then conveyed back into the kitchen.
- The grease filter absorbs the grease particles in the kitchen vapours.
- The activated carbon filter binds the odorous substances.

 If no activated carbon filter is installed, it is not possible to bind the odorous substances in the cooking vapours.

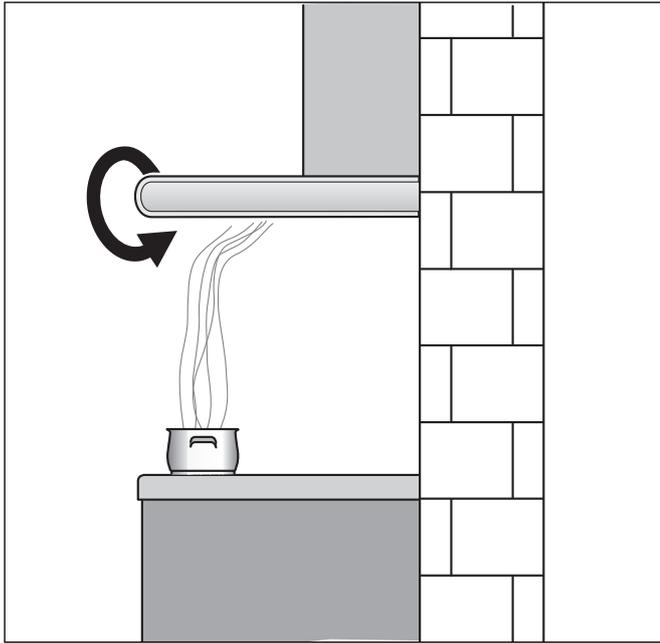

Coanda effect

- You do not need to activate the Coanda effect. The Coanda air flow is always active at every fan level. Cooking vapours are extracted particularly well at the front of the cooking field.
- The Coanda effect may allow you to operate the extractor hood at a lower, quieter level than you were previously accustomed to.
- The Coanda air flow exits the top of the extractor hood's front panel. Do not place any objects on the extractor hood: these may disrupt the Coanda effect.

Operating for the First Time

The Instructions for Use apply to several versions of this appliance. Accordingly, you may find descriptions of individual features that do not apply to your specific appliance.

This extractor hood complies with all relevant safety regulations.

Repairs should be carried out by qualified technicians only.

Improper repairs may put the user at considerable risk.

Before using your appliance for the first time, please read these Instructions for Use carefully. They contain important information concerning your personal safety as well as on use and care of the appliance.

Please retain the operating and installation instructions for a subsequent owner.



This appliance is labelled in accordance with European Directive 2002/96/EG concerning used electrical and electronic appliances (waste electrical and electronic equipment – WEEE). The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

Remove the packaging from the appliance and dispose of it properly. Pay attention to the fact that there are accessories in the packaging. Keep packaging elements out of the reach of children!

Thoroughly clean the appliance before using it for the first time.

Before operating the appliance for the first time, check that the mains connection is in proper working order.

If you encounter a problem

In the event of malfunctions, first of all check the household fuses. If the problem has nothing to do with the power supply, please contact your specialist dealer or your local Gaggenau after-sales service.

If an F appears in the display:

- See "Filters and maintenance" Section.

If it is not possible to operate the extractor hood:

- Disconnect the extractor hood from the mains electricity supply by pulling out the plug or switching it off at the main fuse box. Wait for approx. 1 minute and then switch it on again.

If you have any questions or if a fault occurs, please call Customer Service.

(See list of Customer Service representatives).

When you call, please quote the following:

E-Nr.	FD
-------	----

Enter the relevant numbers into the box above. The E-Nr. (product no.) and FD (production date) are shown on the nameplate which can be seen inside the extractor hood after the filter frame has been detached.

⚠ The manufacturer of the extractor hoods accepts no liability for complaints which can be attributed to the design and layout of the pipework.



Safety Notes

Do not operate damaged appliances.

The appliance must only be connected by an authorised specialist, paying attention to the relevant regulations of the power supply companies and the regional construction regulations.

Observe the assembly instructions!

Connecting cables must not come into contact with hot cooking surfaces.

Do not operate the extractor hood without inserted lamps.

Never operate the appliance without a grease filter.

Hazardous or explosive substances and vapours must not be extracted!

The user is responsible for expert use and the perfect condition of the appliance.

Only ever operate the appliance under supervision.

Caution! Over-greased filters are a fire risk! Only ever deep-fry under the extractor under constant supervision. Pay attention to cleaning the grease filter on a regular basis.

Fire risk! Do not flambé meals under the extractor hood!

Operation of the extractor hood above a hearth for solid fuels (coal or wood etc.) is only partly permitted.

Gas appliances may only be used under the extractor hood when pots and pans are placed on them!

Do not operate all hotplates simultaneously over a prolonged period (max. 15 minutes) at maximum thermal load, otherwise there is a risk of burns from touching the housing surfaces or a risk of damaging the extractor hood. When operating the extractor hood above a hob, operate the hood at maximum setting if three or more hotplates are on at the same time.

The appliance is not intended for use by young children or infirmed persons without supervision. Young children should be supervised to ensure they do not play with the appliance.

If the connecting cable for this appliance is damaged, the cable must be replaced by the manufacturer or his customer service or a similarly qualified person in order to prevent serious injury to the user.

Do not place any heavy objects on the appliance.

Do not clean the appliance with a steam cleaning apparatus or with water pressure because this poses a risk of short-circuits.

Isolate the appliance from the mains during every maintenance operation. To do this, switch-off the corresponding fuse.

Repairs must be carried out by authorised specialists, thus ensuring electrical safety.

No warranty claims can be lodged in the event of damage caused by failure to observe these instructions.

Adequate incoming air must be ensured if a wood, coal, gas or oil heater or an open hearth is operated in the same room as the one in which the hood is installed.

Safe operation is possible whenever the partial vacuum in the place where the firing equipment is installed does not exceed 4 Pa

(0.04 mbar). This can be achieved whenever the air needed for combustion is able to enter through openings that cannot be sealed, for example in doors, windows, incoming/exhaust air wall boxes or other technical means.

Dispose of packaging materials properly (see Installation instructions).

Never allow children to play with the appliance.

Do not let adults or children operate the appliance unsupervised:

- if they are mentally or physically unable to use the appliance safely and correctly,
- if they don't have the knowledge and experience to use the appliance safely and correctly.
- When children become old enough to operate the appliance, it is the legal responsibility of the parents or legal guardians to ensure that they are instructed in safe practices by qualified persons.

This extractor hood is designed for domestic use only.

Light bulbs must always be fitted when the extractor hood is in use.


Defective bulbs should be replaced immediately to prevent the remaining bulbs from overloading.

Overheated fat or oil can easily catch fire.

If you are cooking with fat or oil, e.g. chips, etc., never leave the cooker unattended.

The slot for the Coanda air flow must be free at all times.


Technical modifications reserved.

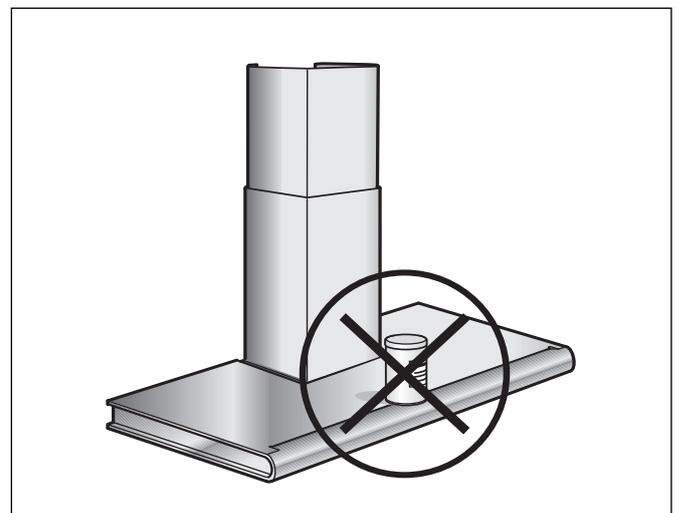

Operating procedure

The most effective method of removing vapours produced during cooking is to:

- **Switch the ventilator ON** as soon as you begin cooking.
- **Switch the ventilator OFF** a few minutes after you have finished cooking.

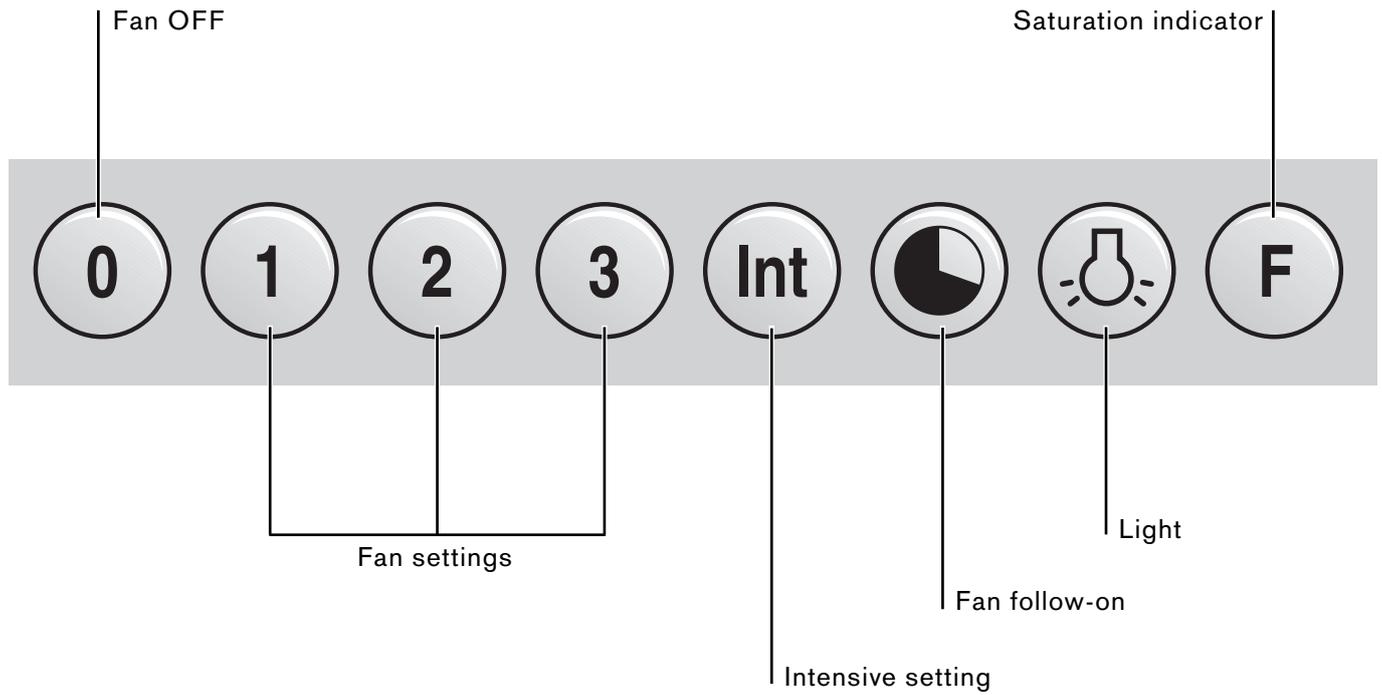

Switching the fan ON:

- Press the **1, 2, 3** or **Int** button.

Switching the fan OFF:

- Press the **0** button.

Intensive setting

Maximum power is obtained at the intensive setting. It is only required for short intervals.

- The **Int** key for the intensive level should be pressed when browning and frying in an open pan.

If you have switched on the hood by selecting the intensive level, it will be switched off again automatically after 5 minutes.
- If you press the **Int** key while the hood is running at fan level **1, 2** or **3**, the electronic control will switch back automatically to the previously selected fan level after 5 minutes.
- If you would like to end the intensive level **before** the five minutes have elapsed, press the **0** key ("Motor off") or select a different level. It is possible to switch off the extraction function at any time by pressing the **0** key (motor "off").

Special functions

Intensive time:

- You can set the intensive level running time to 3, 5 or 10 minutes by simultaneously pressing the **Int** key and the **1, 2** or **3** key and you can store this setting. When delivered, the appliance is set to five minutes, i.e. the combination of the **Int** key and the key **2**.

Fan follow-on:

- Delayed shut-off is possible at any level. First press the required key **1, 2, 3** or **Int** and then press the  key.
The delayed shut-off time for all levels is ten minutes. After these ten minutes, the ventilation switches off, but the lighting stays on.

Interval ventilation:

- Interval ventilation is a special feature of this appliance which periodically activates the fan for five minutes every hour. You can activate this function by simultaneously pressing the **0** key and, depending on the required extraction capacity, the **1, 2** or **3** key.

This mode of operation is indicated by alternating illumination of the  key together with the corresponding fan level indicator.

You can switch off interval ventilation by pressing the **0** key.

Lighting:

- Briefly press the  button to switch the light on and off.
- The light can be switched on at any time, even though the fan is switched off.

Filters and maintenance

Grease filters

Metal filters are used to trap the greasy element of the vapours that develop during cooking.

The filter mats are made from non-combustible metal.

Caution:

As the filter becomes more and more saturated with grease, not only does the risk of it catching fire increase but the efficiency of the extractor hood can also be adversely affected.

Important:

By cleaning the metal grease filters at appropriate intervals, the possibility of them catching fire as a result of a build-up of heat such as occurs when deep-fat frying or roasting is taking place, is reduced.

Saturation indicator: F

The grease filter saturation display F flashes after an operating time of 30 hours to you indicate to you that you should clean the grease filter. The grease filters can of course be cleaned at any time, even if the grease filter saturation display has not started to flash.

Cleaning the metal grease filters:

- In normal operation (1 to 2 hours daily), the metal grease filter must be cleaned 1 x a month.
- The filters can be cleaned in a dishwasher. It is however possible that they will become slightly discoloured.
- The filter must be placed loosely, and NOT wedged, in the dishwasher.

Important:


Metal filters that are saturated with grease should not be washed together with other dishes etc.

- When cleaning the filters by hand, soak them in hot soapy water first of all.
Do not use aggressive, acidic or caustic cleaners.
Then brush the filters clean, rinse them thoroughly and leave the water to drain off.

Removing and inserting the metal grease filters:

IMPORTANT: The lighting must be switched OFF and cool.

- 1 Press the catch on the grease filters inwards and fold the filters down.
At the same time take hold of the underside of the grease filters with your other hand.

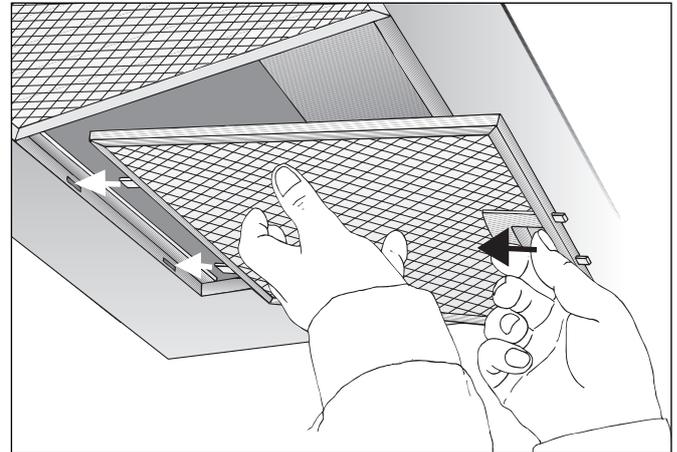

- 2 Clean the filters.
- 3 Insert the clean filters back into the hood.
- 4 **Cancel the F in the display.**
– Press the button F.

Activated carbon filter

For neutralizing odours in recirculating mode.

Caution:

As the filter becomes more and more saturated with grease, there is an increased risk of fire and the function of the extractor hood may be impaired.


Important:

Change the activated carbon filter promptly to prevent the risk of fire from the accumulation of heat when deep-fat frying or roasting.

Installation and removal:

IMPORTANT: The lighting must be switched OFF and cool..

- 1 Remove the metal-mesh filters (see "Removing and inserting the metal-mesh grease filters").
- 2 Insert the activated carbon filter.

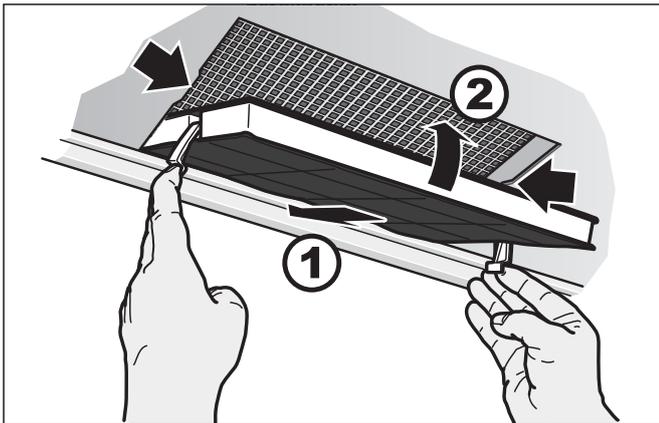

- 3 Insert the metal grease filters (see "Removing and inserting the metal grease filters").

Replacing the activated carbon filter:

- During normal operation (1 to 2 hours per day) the activated carbon filters should be replaced approximately 1 x year.
- A replacement filter can be obtained from any authorized dealer (see optional accessories).
- **Use original filters only.**
By doing so you will obtain maximum performance from your extractor hood.

Disposing of the old activated carbon filter:

- There are no pollutants in the activated carbon filters. They can therefore be disposed of as part of your normal domestic refuse.

Cleaning and care

Isolate the extractor hood by pulling out the mains plug or switching off the fuse.

⚠ Do not clean the extractor hood with abrasive sponges or with cleaning agents which contain sand, soda, acid or chlorine!

- Clean the extractor hood with a hot soap solution or a mild window cleaner.

IMPORTANT: No liquids may enter the air outlet slot.

- Do not scrape off dried-on dirt but wipe off with a damp cloth.
- When cleaning the grease filters, remove grease deposits from accessible parts of the housing. This prevents the risk of fire and ensures that the extractor hood continues operating at maximum efficiency.

⚠ Clean the operating buttons with a mild soapy solution and a soft, damp cloth only. Do not use stainless-steel cleaner to clean the operating buttons.

Stainless steel surfaces:

- Use a mild non-abrasive stainless steel cleaner.
- Clean the surface in the same direction as it has been ground and polished.
- We recommend our stainless steel cleaner no. 461731. See enclosed service booklet for order address.

Aluminium, coated and plastic surfaces:

- Do not use dry cloths.
- Use a mild window cleaning agent.
- Do not use aggressive, acidic or caustic cleaners.


Observe the warranty regulations in the enclosed service booklet.

Replacing the light bulbs


- 1 Switch the extractor hood off and isolate it by removing the mains plug or by switching off the fuse.

⚠ When operating, the fluorescent light bulbs get very hot. Even after a while, there is still a risk of being burnt.

- 2 Remove the metal-mesh filters (see "Removing and inserting the metal-mesh grease filters").
- 3 Loosen the screws for the mounting rails..
- 4 Carefully remove the glass panes.

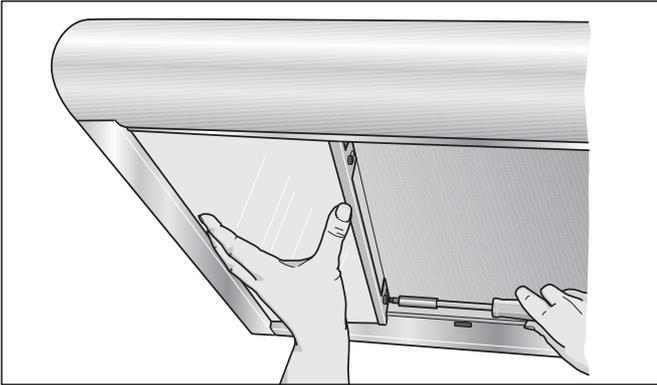



- 5 Remove the sockets for the fluorescent light bulbs.

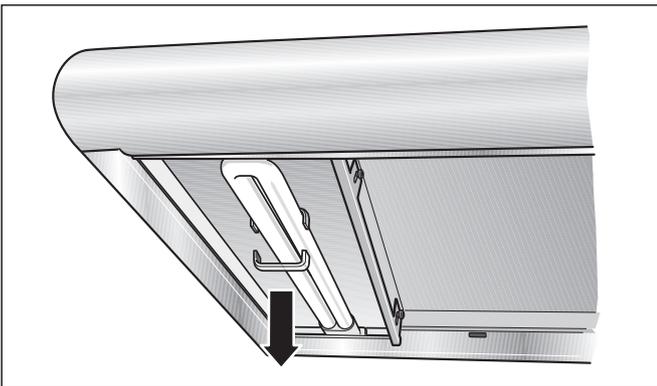

- 6 Replace the fluorescent light bulbs with new ones available commercially (36 W, 840 Cool White, socket 2 G 11).

⚠ Risk of breakage!

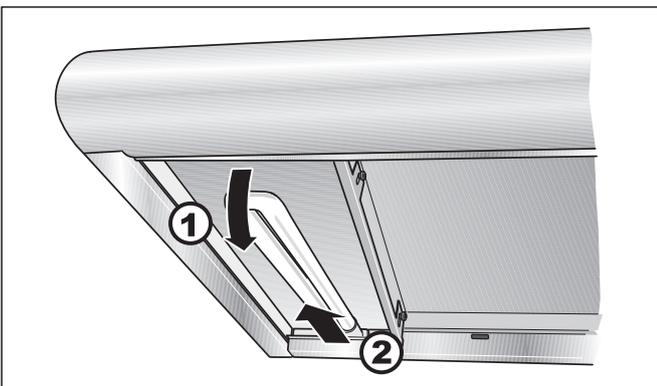

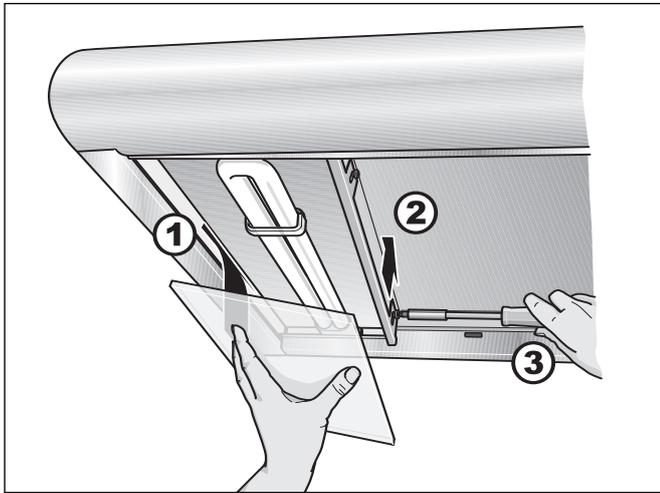

- 7 Insert the sockets for the fluorescent light bulbs.
- 8 Carefully mount the glass panes.
- 9 Tighten the screws for the mounting rails.

- 10 Insert the metal grease filters (see "Removing and inserting the metal grease filters").
- 11 Restore the power by inserting the mains plug or switching on the fuse.

Note: If the light does not function, check that the bulbs have been inserted correctly.



Important information

Installation

WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

- a.) Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- b.) Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent back drafting. Follow the heating equipment manufacturer's guideline and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning (ASHRAE), and the local code authorities.
- c.) When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
- d.) Ducted fans must always be vented to the outdoors.
- e.) NEVER place a switch where it can be reached from a tub or shower.

WARNING – TO REDUCE THE RISK OF FIRE, USE ONLY METAL DUCTWORK.

WARNING:

Coanda effect hoods must not be installed over a gas oven in order to avoid possible interference with the combustion or ignition characteristics of the oven. Coanda effect hoods can be installed over gas cooktops alone and are especially recommended for installation over Gaggenau's gas cooktops KG 260, KG 291, KG 491, KG 354, VG 231, VG 330, VG 353, VG 411, VG 421.

The applicable regulations of the energy supply companies and the **regional construction regulations** must be observed when installing the hood.

This hood has been approved for installations as low as 30" and as high as 36" above the cooktop.

The wall hood was conceived for the **exhaust air or air recirculation mode**. The exhaust air can be routed into a separate exhaust air shaft or directly into the open through the outside wall.

It is not allowed to pass the exhaust air into a flue or exhaust air chimney that is in operation or into a shaft that is linked to the heating basement. Consult the chimney sweep responsible for your district whenever you wish to pass the exhaust air into a chimney that is not in operation.

During the course of planning, a chimney sweep must be consulted if a room air-dependent hearth is operated in the same room as the one in which a hood is operated in the exhaust air mode. Adequate incoming air must be ensured. The applicable construction and safety regulations must be observed.

Adequate incoming air must be ensured if a wood, coal, gas or oil heater or an open hearth is operated in the same room as the one in which the hood is installed.

Safe operation is possible whenever the partial vacuum in the place where the firing equipment is installed does not exceed 4 Pa (0.04 mbar). This can be achieved whenever the air needed for combustion is able to enter through openings that cannot be sealed, for example in doors, windows, incoming/exhaust air wall boxes or other technical means.

Grounding Instructions

The appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING – IMPROPER GROUNDING CAN RESULT IN A RISK OF ELECTRIC SHOCK.

Consult a qualified electrician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician install an outlet near the appliance.



Important information

Old appliances are not worthless rubbish. Valuable raw materials can be reclaimed by recycling old appliances. Before disposing of your old appliance, render it unusable.

You received your new appliance in a protective shipping carton. All packaging materials are environmentally friendly and recyclable. Please contribute to a better environment by disposing of packaging materials in an environmentally-friendly manner.

Please ask your dealer or inquire at your local authority about current means of disposal.

The extractor hood can be used in exhaust air or circulating air mode.

Always mount the extractor hood over the centre of the hob.

Minimum distance between electric hob and bottom edge of extractor hood **30"**, Fig. 1.

The extractor hood must not be installed over a solid fuel cooker – a potential fire hazard (e.g. flying sparks) – unless the cooker features a **closed, non-removable cover** and all national regulations are observed.

The smaller the gap between the extractor hood and hotplates, the greater the likelihood that droplets will form on the underside of the extractor hood.

Additional information concerning gas cookers:

When installing gas hotplates, comply with the relevant national statutory regulations (e.g. in Germany: Technische Regeln Gasinstallation TRGI).

Always comply with the currently valid regulations and installation instructions supplied by the gas appliance manufacturer.

Only one side of the extractor hood may be installed next to a high-sided unit or high wall. Gap at least $1^{31/32}$ ".

Minimum distance on gas hotplates between the upper edge of the trivet and lower edge of the extractor hood: **36"**, Fig. 1.

Prior to installation



Exhaust-air mode

- **Installation accessories for exhaust air mode.**

Ventilation duct

AD280-012 for ceiling heights of $88\frac{19}{32}$ " – $103\frac{5}{32}$ "

AD280-022 for ceiling heights of $103\frac{5}{32}$ " – $118\frac{1}{2}$ ".

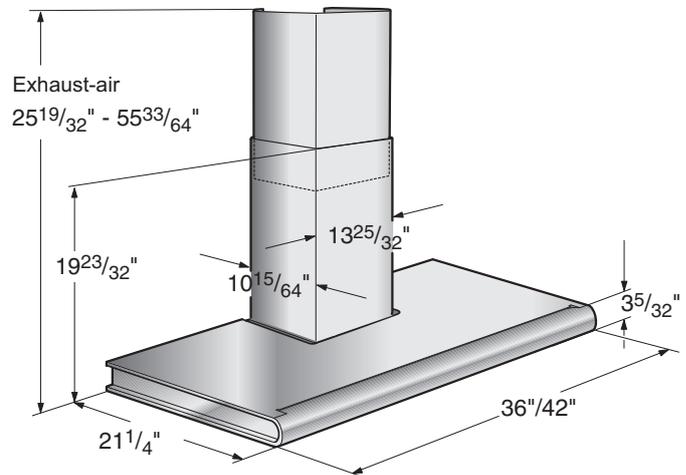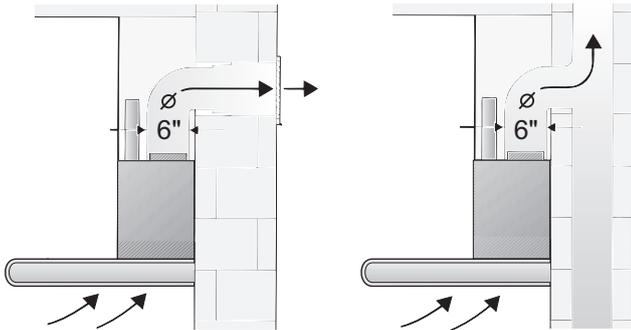

The exhaust air is discharged upwards through a ventilation shaft or directly through the outside wall into the open.

Exhaust air should neither be directed into a smoke or exhaust flue that is currently used for other purposes, nor into a shaft that is used for ventilating rooms in which stoves or fireplaces are also located.

Exhaust air may be discharged in accordance with official and statutory regulations only (e.g. national building regulations).

Local authority regulations must be observed when discharging air into smoke or exhaust flues that are not otherwise in use.

When the extractor hood is operated in exhaust-air mode simultaneously with a different burner which also makes use of the same chimney (such as gas, oil or coal-fired heaters, continuous-flow heaters, hot-water boilers) care must be taken to **ensure that there is an adequate supply of fresh air** which will be needed by the burner for combustion.

Safe operation is possible provided that the underpressure in the room where the burner is installed does not exceed 4 Pa (0.04 mbar).

This can be achieved if combustion air can flow through non-lockable openings, e.g. in doors, windows and via the air-intake/exhaust-air wall box or by other technical measures, such as reciprocal interlocking, etc.

If the air intake is inadequate, there is a risk of poisoning from combustion gases which are drawn back into the room.

An air-intake/exhaust-air wall box by itself is no guarantee that the limiting value will not be exceeded.

Note: When assessing the overall requirement, the combined ventilation system for the entire household must be taken into consideration. This rule does not apply to the use of cooking appliances, such as hobs and ovens.

Unrestricted operation is possible if the extractor hood is used in recirculating mode – with activated carbon filter.

If the exhaust air is going to be discharged into the open, a telescopic wall box should be fitted into the outside wall.

For optimum extractor hood efficiency:

- Short, smooth air exhaust pipe.
- As few bends in the pipe as possible.
- Diameter of pipe to be as large as possible and no tight bends in pipe.

If long, rough exhaust-air pipes, many pipe bends or smaller pipe diameters are used, the air extraction rate will no longer be at an optimum level and there will be an increase in noise.

⚠ The manufacturer of the extractor hoods accepts no liability for complaints which can be attributed to the design and layout of the pipework.

- **Round pipes:**
We recommend
Internal diameter: **6"**.
- **Flat ducts** must have an internal cross-section that equates to that of round pipes.
There should be no sharp bends.
∅ 6" approx. 177 cm²
- **If pipes have different diameters:** Insert sealing strip.
- **For exhaust-air mode,** ensure that there is an adequate supply of fresh air.

Connecting a ∅ 6" exhaust-air pipe:

- Mount the pipe directly onto the air outlet on the hood.




Circulating-air mode

- **Installation accessories for circulating air mode.**


Ventilation duct

AD280-112 for ceiling heights of $92^{29/32}$ " - $103^{5/32}$ "

AD280-122 for ceiling heights of $103^{5/32}$ " - $118^{1/2}$ ".

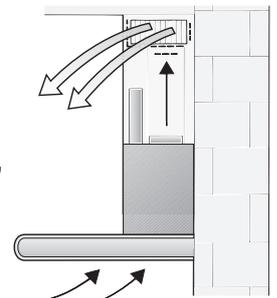

- With activated carbon filter if exhaust-air mode is not possible.

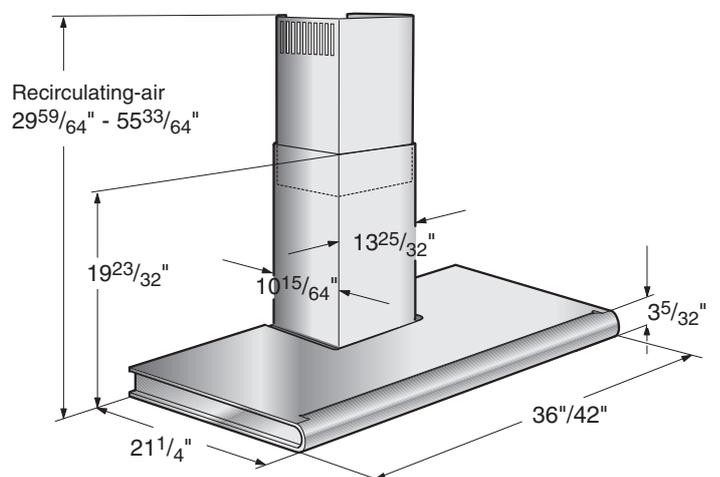

Preparing the wall

- The wall must be flat and perpendicular.
- Make sure that the wall can bear the applied loads.
- The provided screws and wall plugs are suitable for solid masonry. On all other wall types (e.g. plasterboard, porous concrete, Poroton bricks) use the appropriate fasteners.
- Ensure that the wall is capable of providing a firm hold for mounting screws and plugs.

Weight in kg:

	Exhaust-air	Recirculating air
36"	32,0	34,0
48"	36,0	38,0

We reserve the right to construction changes within the context of technical development.

Electrical connection

WARNING: THIS APPLIANCE MUST BE EARTHED

IMPORTANT: Fitting a Different Plug:

The wires in the mains lead are coloured in accordance with the following code:

Green	– Earth
White	– Neutral
Black	– Live

If you fit your own plug, the colours of these wires may not correspond with the identifying marks on the plug terminals.

This is what you have to do:

- 1 Connect the green (Earth) wire to the terminal in the plug marked 'E' or with the symbol (\oplus), or coloured green or green and yellow.
- 2 Connect the white (Neutral) wire to the terminal in the plug marked 'N' or coloured black.
- 3 Connect the black (Live) wire to the terminal marked 'L', or coloured red.

The extractor hood should only be connected to an earthed socket that has been installed according to relevant regulations.

If possible, site the earthed socket directly behind the chimney panelling.

- The earthed socket should be connected via its own circuit.
- If the earthed socket is no longer accessible following installation of the extractor hood, ensure that there is a permanently installed disconnecter.

If it is necessary to wire the extractor hood directly into the mains:

The extractor hood should only be connected to the electricity supply by a properly qualified electrician.

A separator must be installed in the household circuit. A suitable separator is a switch that has a contact gap of more than $\frac{1}{8}$ " and interrupts all poles. Such devices include circuit breakers and contactors.

⚠ If the connecting cable for this appliance is damaged, the cable must be replaced by the manufacturer or his customer service or a similarly qualified person in order to prevent serious injury to the user.

Electrical data

Are to be found on the name plate inside the appliance after removal of the filter frame.

⚠ Before undertaking any repairs, always disconnect the extractor hood from the electricity supply.

Length of the connecting cable: 52".

This extractor hood corresponds to EC regulations concerning RF interference suppression.

Installation



This extractor hood is intended to be mounted onto the kitchen wall.

- 1 Remove the grease filter (refer to Operating Instructions).
- 2 Draw a line on the wall from the ceiling to the lower edge of the hood at the centre of the location where the hood is going to be mounted.
- 3 Use the template to mark the points on the wall where the screws will be mounted. In order to make it easier to hook the hood onto the screws, draw the outline of the area where the hood will be attached.


⚠ Ensure that the minimum distance between the hob and the extractor hood is maintained – **30"** for an electric hob and **30"** for a gas hob. The bottom edge of the template equates to the lower edge of the extractor hood.

- 4 Drill $2 \times \frac{5}{16}$ " \varnothing holes for the upper fixing bracket and $2 \times \frac{5}{16}$ " \varnothing holes for the lower fixing bracket and press in wall plugs flush with the wall..

Note: Take into account any special accessories that are going to be fitted.

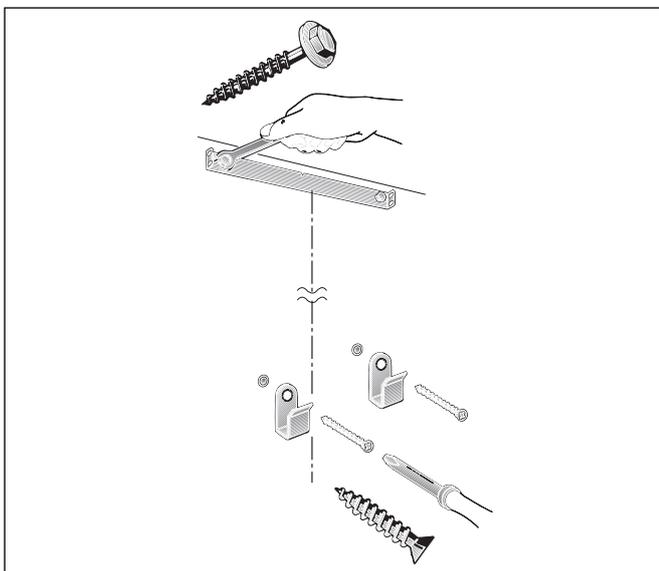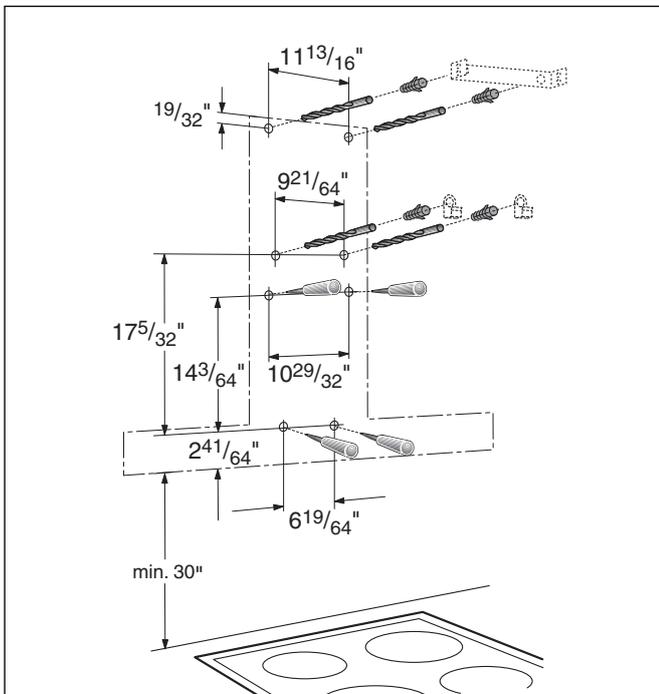


- 5 Screw on the upper and the two lower fixing brackets.

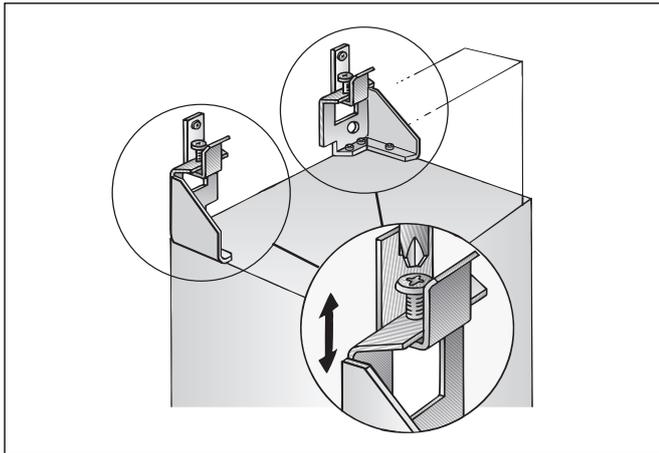


- 6** Attach the extractor hood.
Adjust the height and align horizontally with the adjusting screws.

⚠ Check that the 4 lower fixing holes have been correctly marked. If required, mark again..

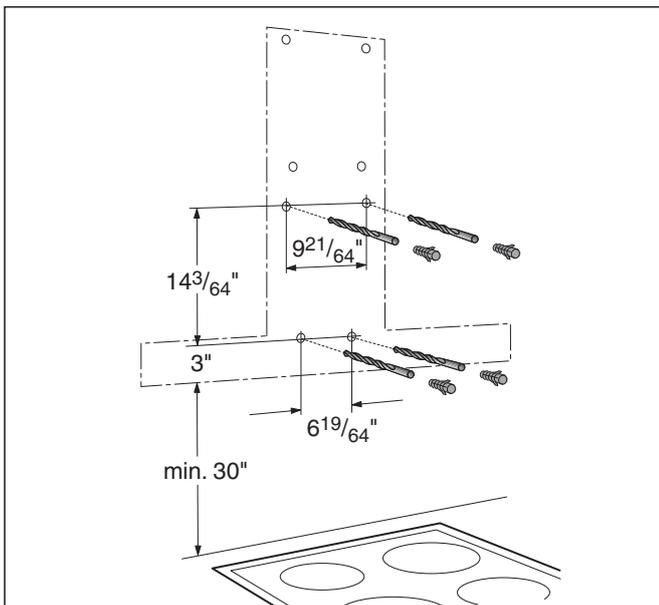

- 7** Remove the extractor hood. Drill the 4 lower $\frac{5}{16}$ " \varnothing fixing holes and press in the wall plugs flush with the wall..

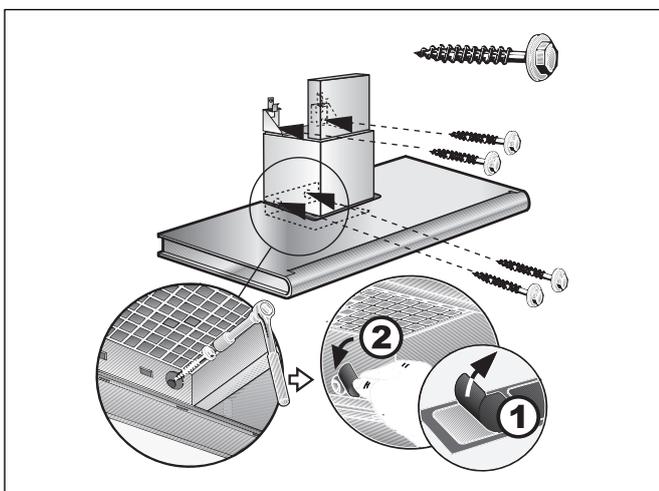

- 8** Attach the extractor hood and screw into position with the remaining 4 screws.

- 9** Stick protective film over the holes of the 2 lower mounting bolts in the protective grid.

- 10** Connect up the air outlet pipe.

- 11** Connect the hood to the electricity supply.

12 Carefully remove the protective foil.


 Avoid damage to the sensitive surface.

Warning: The interior walls of the flue panelling can have sharp edges – Risk of injury –. We recommend that you wear gloves when installing.


13 Insert the upper flue duct into the lower flue duct.

 Protect the cover panels from scratches, for example by laying the template used for marking the wall over the top edge of the lower section.


14 Insert the complete flue duct at an angle and swivel to the rear.

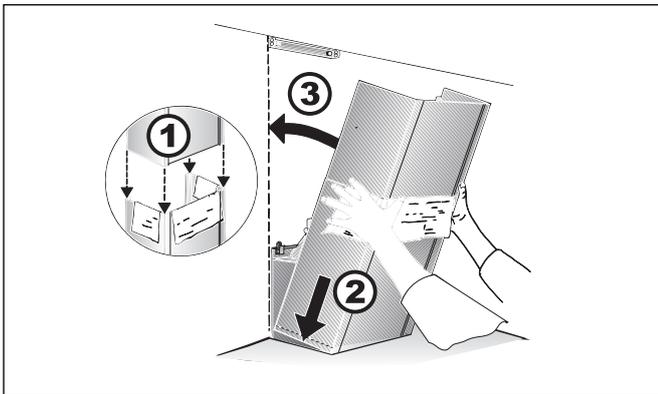

15 Carefully pull the upper flue duct upwards and screw the sides to the fixing bracket with 2 screws.

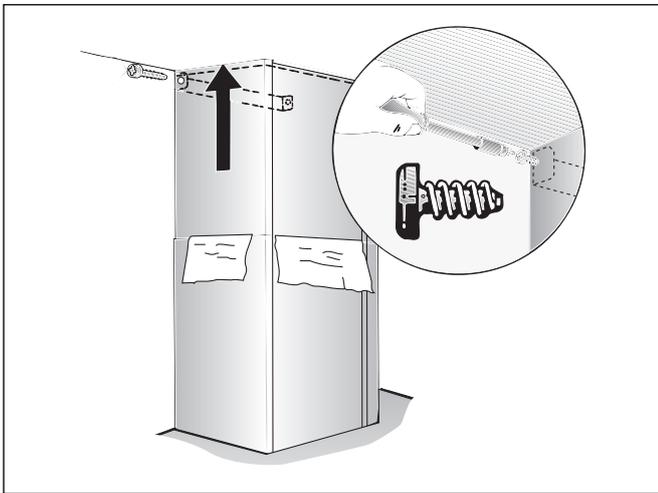

16 Insert the grease filter (refer to Operating Instructions).

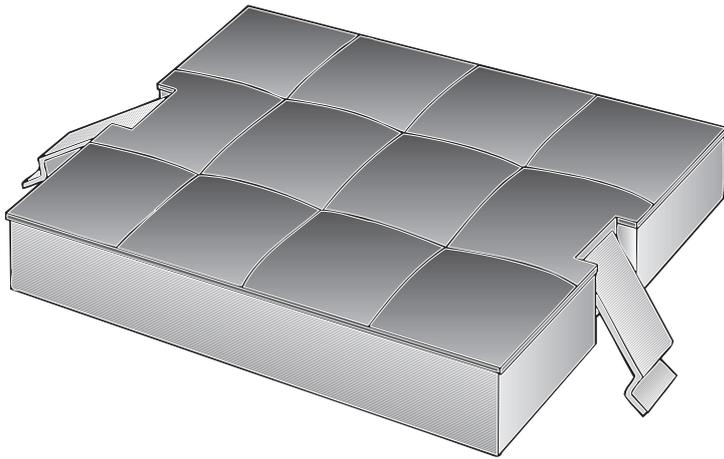

KF001-010

Gaggenau

5551 McFadden Avenue
Huntington Beach, CA 92649
Telephone: 877.4GAGGENAU
USA
www.gaggenau-usa.com

Gaggenau Hausgeräte GmbH

Carl-Wery-Straße 34
81739 München
Germany
www.gaggenau.com

9000384457 EB 8810 en

GAGGENAU