

Repair & Replacement Instructions

KI 700 Series/E-Series/U-Series/Areus/SystemsWall Pedestals

Pedestal Lock Removal and Insertion

July 2015

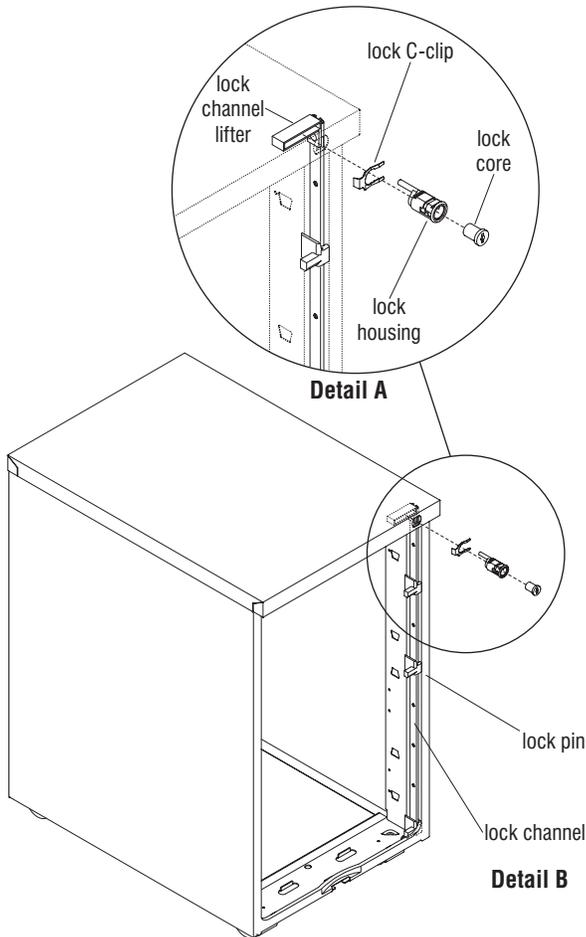


Figure 1

Pedestal Lock Removal & Insertion

Note: The pedestal lock consists of two main components. They are the lock mechanism and the lock channel. See Figure 1 & Detail A to identify the various parts.

Lock Removal

1. To make lock removal easier, remove contents from top drawer and remove drawer from pedestal (Figure 1).
2. From inside the pedestal at the lock location, first locate and remove the lock C-clip which holds the lock housing in place. A pair of pliers may be used to grip the tab on the C-clip, then pull with force, or use a hammer to lightly tap sideways on the pliers to release the C-clip from the lock housing (Figure 1 & Detail A).

3. Next, pull the lock housing out of the unit. If the lock housing does not come out, the cabinet model also utilizes a "side clip" to hold the housing in place. To remove the side clip, first use a core extraction key to remove the lock core from the housing. Then, from inside the center of the lock housing, locate the "access window" at each side and use a slender screwdriver, or nail and press then give a firm tap on the side clip, pushing it through the lock housing access window. Do this at each side from inside the core and the side clip will fall off, then the lock core can be removed (Figure 1 & Detail B).

Lock Installation

1. If the lock core was removed, replace it into the lock housing (Figure 1).
2. Insert the key into the lock and rotate it half-way between the two end positions, then orient the lock/housing so the rear pin is at the 3 o'clock position.
3. Next, insert the lock housing into the lock hole in the top of the pedestal, and at the same time lift the lock channel so the tail of the lock housing can properly insert into the lock channel lifter. Press the lock housing in to be flush with the face of the pedestal, then slide the lock C-clip into the corresponding grooves on the lock housing to secure it. Ensure that the C-clip is firmly attached (Figure 1 & Detail A).
4. Reattach the top drawer onto the suspensions if required, then open and close all drawers to test. Ensure that the lock travels smoothly and verify that each drawer remains closed when in the locked position.

