


# Specifications & Operation Instructions ■

## Concerto ADA Flip-up Arm

February 2008

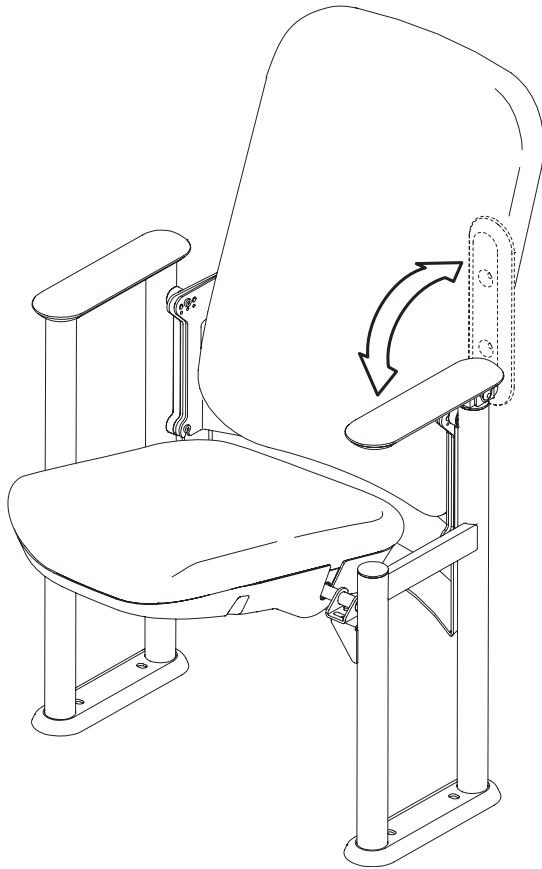

The Concerto ADA Arm option consists of an upright with an integral hinged armrest. The intent of this option is to allow the arm to be flipped up, thus allowing a wheelchair occupant to slide into the seat unobstructed. Thereafter, the occupant may flip the armrest back down for normal use.

The Concerto ADA Arm upright is delivered fully assembled and installs in exactly the same manner as the standard upright. The option is available for both floor- and riser-mount applications. End panels are available for either. The built-in aisle light option is not available on the ADA upright because of the moving armrest. A tablet arm may not be mounted directly the ADA upright. If this seat requires a tablet arm, simply mount the tablet arm to the inboard (standard) upright.

The Concerto ADA Flip-up Arm option was designed and tested to meet the same ANSI/BIFMA specifications as our standard upright.

